MIDMARK®

INSTALLATION INSTRUCTIONS FOR THERMOMETER ASSEMBLY USED ON THE MODEL M7

FOR UNITS PRIOR TO SERIAL #:

RB007441	CR001114
CS001645	CP001070

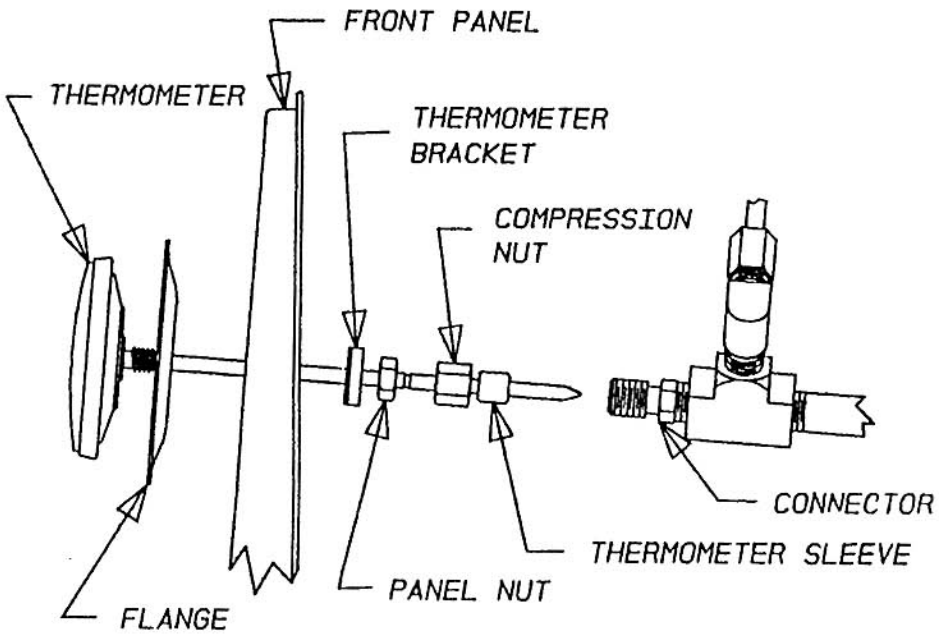

INSTALLATION:

1. Remove old thermometer by removing the panel nut and the compression nut from their threads. The thermometer should slide freely through the front panel.
2. Remove the old connector and replace with the connector supplied in the kit. Make sure threads are sealed properly.
3. Remove thermometer sleeve from new thermometer and put thermometer through original flange and front panel as shown. Slide thermometer bracket, panel nut, compression nut and thermometer sleeve onto the stem of the thermometer as shown.
4. Push thermometer stem into the connector until the thermometer and flange are flush to front panel. Tighten panel nut against thermometer bracket until thermometer is held firm.
5. Push thermometer sleeve up to connector and tighten compression nut onto connector until proper seal is formed.

FOR UNITS AFTER AND INCLUDING SERIAL #:

RB007441	CR001114
CS001645	CP001070

INSTALLATION:

1. Follow Installation instructions above with the following exceptions:
   A. The flange is not needed on front panel.
   B. The connector does not need to be changed.

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 FAX 937-526-5542

ALL PRODUCTS SUBJECT TO IMPROVEMENT CHANGES WITHOUT NOTICE!
LITHO IN U.S.A. INDUSTRY CODE 0251 003-0608-00 (REV. B)
COPYRIGHT BY MIDMARK CORPORATION - 1992